
#### Models MP-XX & MMP-XX

Please read all instructions prior to installation and keep for future reference!


- 1. PRODUCT TO BE INSTALLED BY A QUALIFED ELECTRICIAN.
- 2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK. 3. ACCESS IS REQUIRED FOR SERVICE AND MAINTENANCE

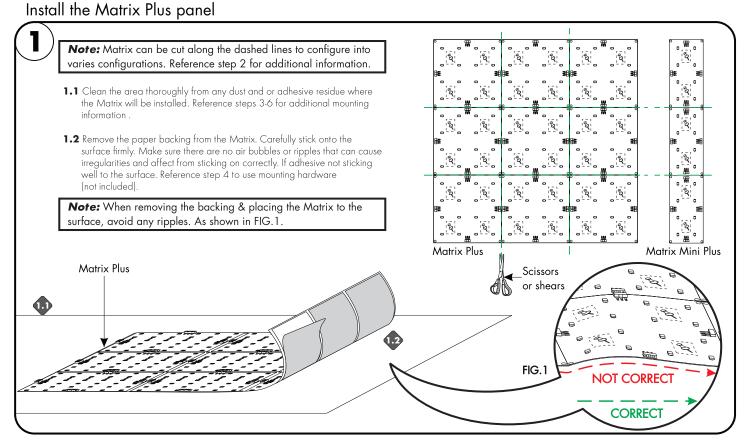



### Common Matrix Plus configurations

Note: Matrix Plus & Matrix Mini Plus can be installed in multiple configuration. Reference diagram below to see if your configuration is possible. When connecting to another Matrix Plus always connect all the corresponding female connectors, with a male adapter to achieve a proper connection.

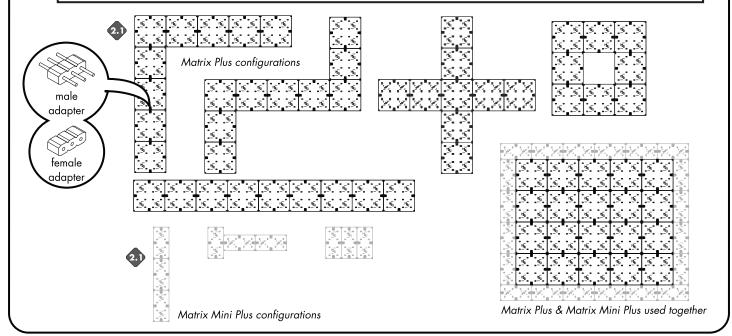



page 1 of 4


#### Models MP-XX & MMP-XX

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFED ELECTRICIAN.

2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK.

3. ACCESS IS REQUIRED FOR SERVICE AND MAINTENANCE

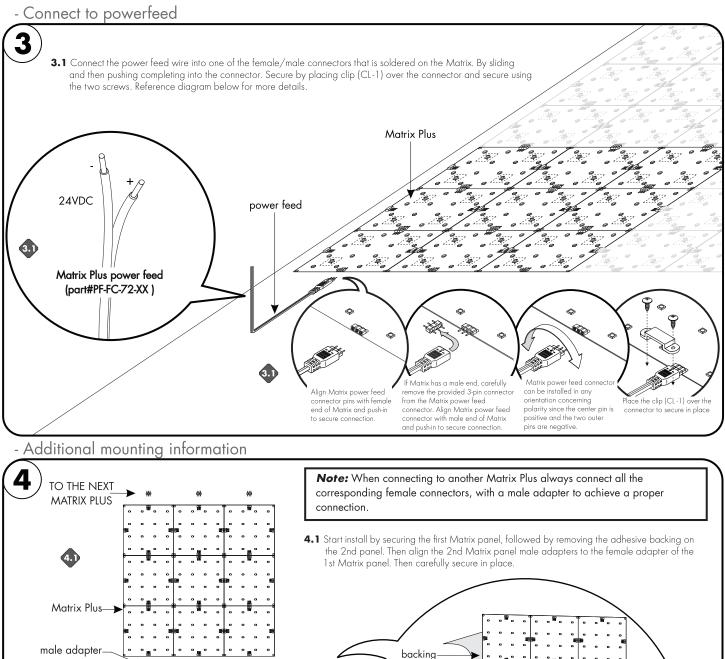

Matrix Plus (2nd)

male adapter

Matrix Plus (1st)

4.

page 2 of 4

female adapter


CONNECT TO POWER SUPPLY

#### Models MP-XX & MMP-XX


Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFED ELECTRICIAN.

- 2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK. 3. ACCESS IS REQUIRED FOR SERVICE AND MAINTENANCE
- 3. ACCESS IS REQUIRED FOR SERVICE AND MAINTENANCE

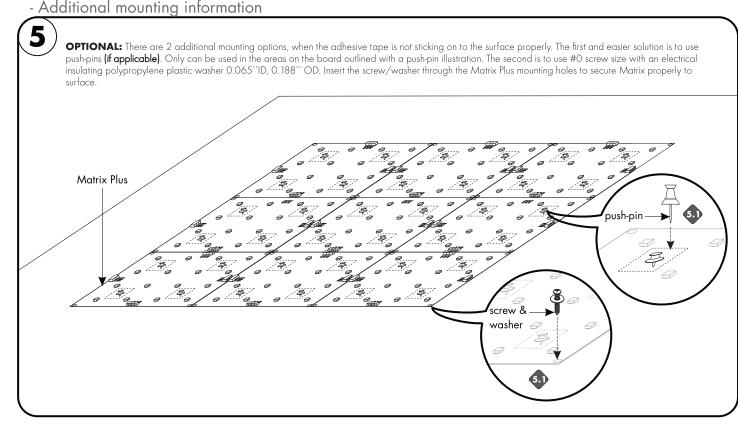

### - Sample Layout

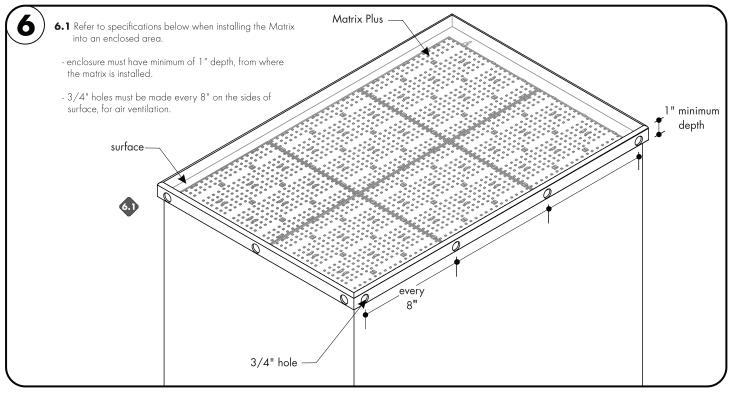

ptic arts


page 3 of 4

#### Models MP-XX & MMP-XX

Please read all instructions prior to installation and keep for future reference!

- 1. PRODUCT TO BE INSTALLED BY A QUALIFED ELECTRICIAN.
- 2. PRIOR TO INSTALLATION ENSURE POWER IS OFF AT FUSE BOX TO PREVENT ELECTRICAL SHOCK.
- 3. ACCESS IS REQUIRED FOR SERVICE AND MAINTENANCE

### - Wiring Diagram

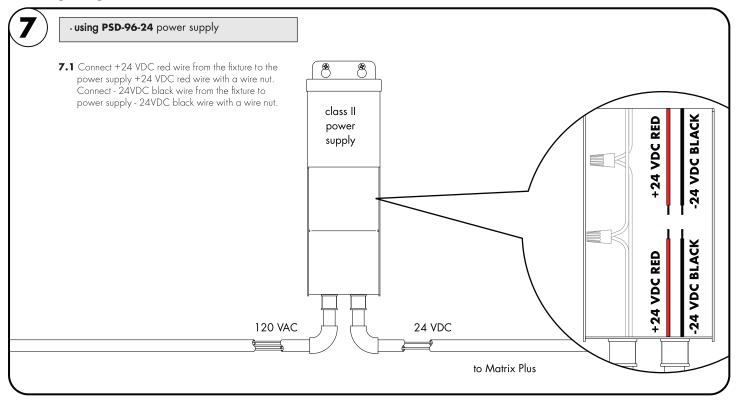

### - Powerfeed locations

